



**EUROTHERM
DRIVES**

620 Standard 620 Com 620 Link

Product Manual

HA463584 Issue 5

Compatible with Version 4.x Software

© Copyright Eurotherm Drives Limited 1999

All rights strictly reserved. No part of this document may be stored in a retrieval system, or transmitted in any form or by any means to persons not employed by a Eurotherm group company without written permission from Eurotherm Drives Ltd.

Although every effort has been taken to ensure the accuracy of this document it may be necessary, without notice, to make amendments or correct omissions. Eurotherm Drives cannot accept responsibility for damage, injury, or expenses resulting therefrom.

2-4 Pre-Installation Planning

INSTALLATION WIRING DIAGRAMS

This section shows all the necessary wiring details for connecting up a 620 Vector series drive.

Figure 2.5 shows the minimum configuration required for basic operation of the Drives.

Figure 2.6 shows a full connection diagram to utilise all the features of the Drives.

All the 620 Vector Drives are wired similarly. The main difference between the variants (other than power rating and physical size) is the capacity of the upstream circuit breaker (MCB1 in Figure 2.6) and the layout of the power terminals. The MCB details are listed in Table 2-1, and the power terminals are shown in Figures 2.9 to 2.12.

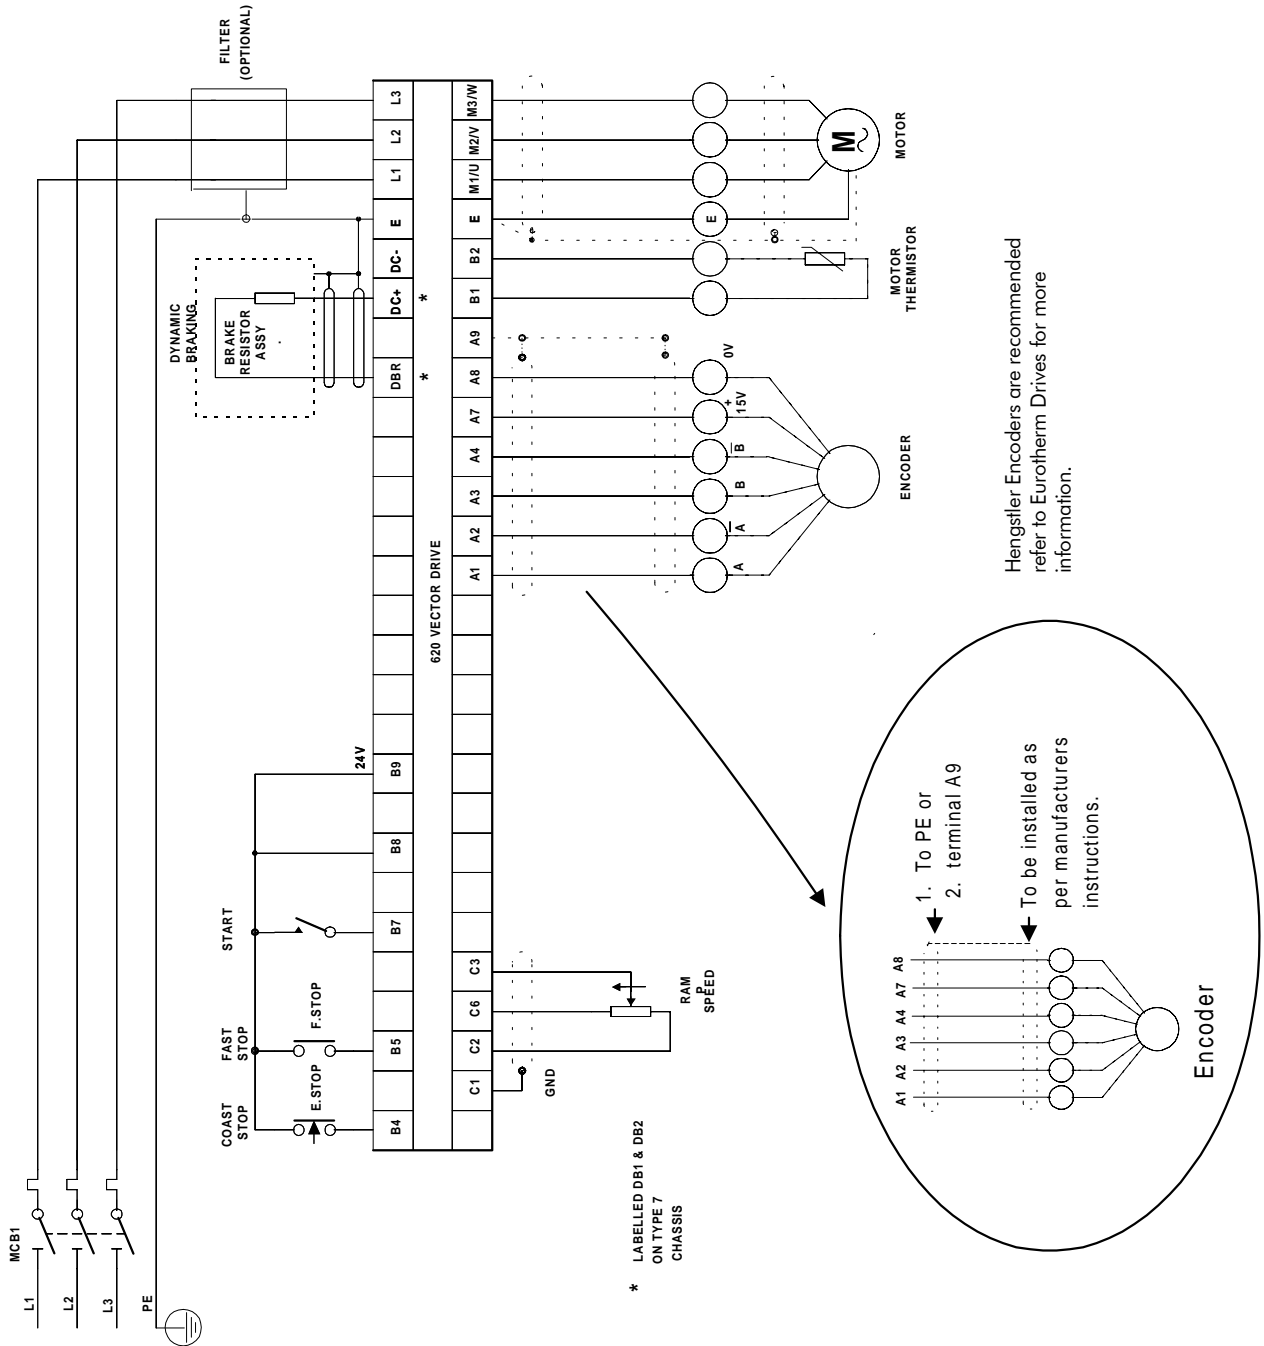


Figure 2.5 - Minimum wiring configuration for 620 series drives

Full Installation

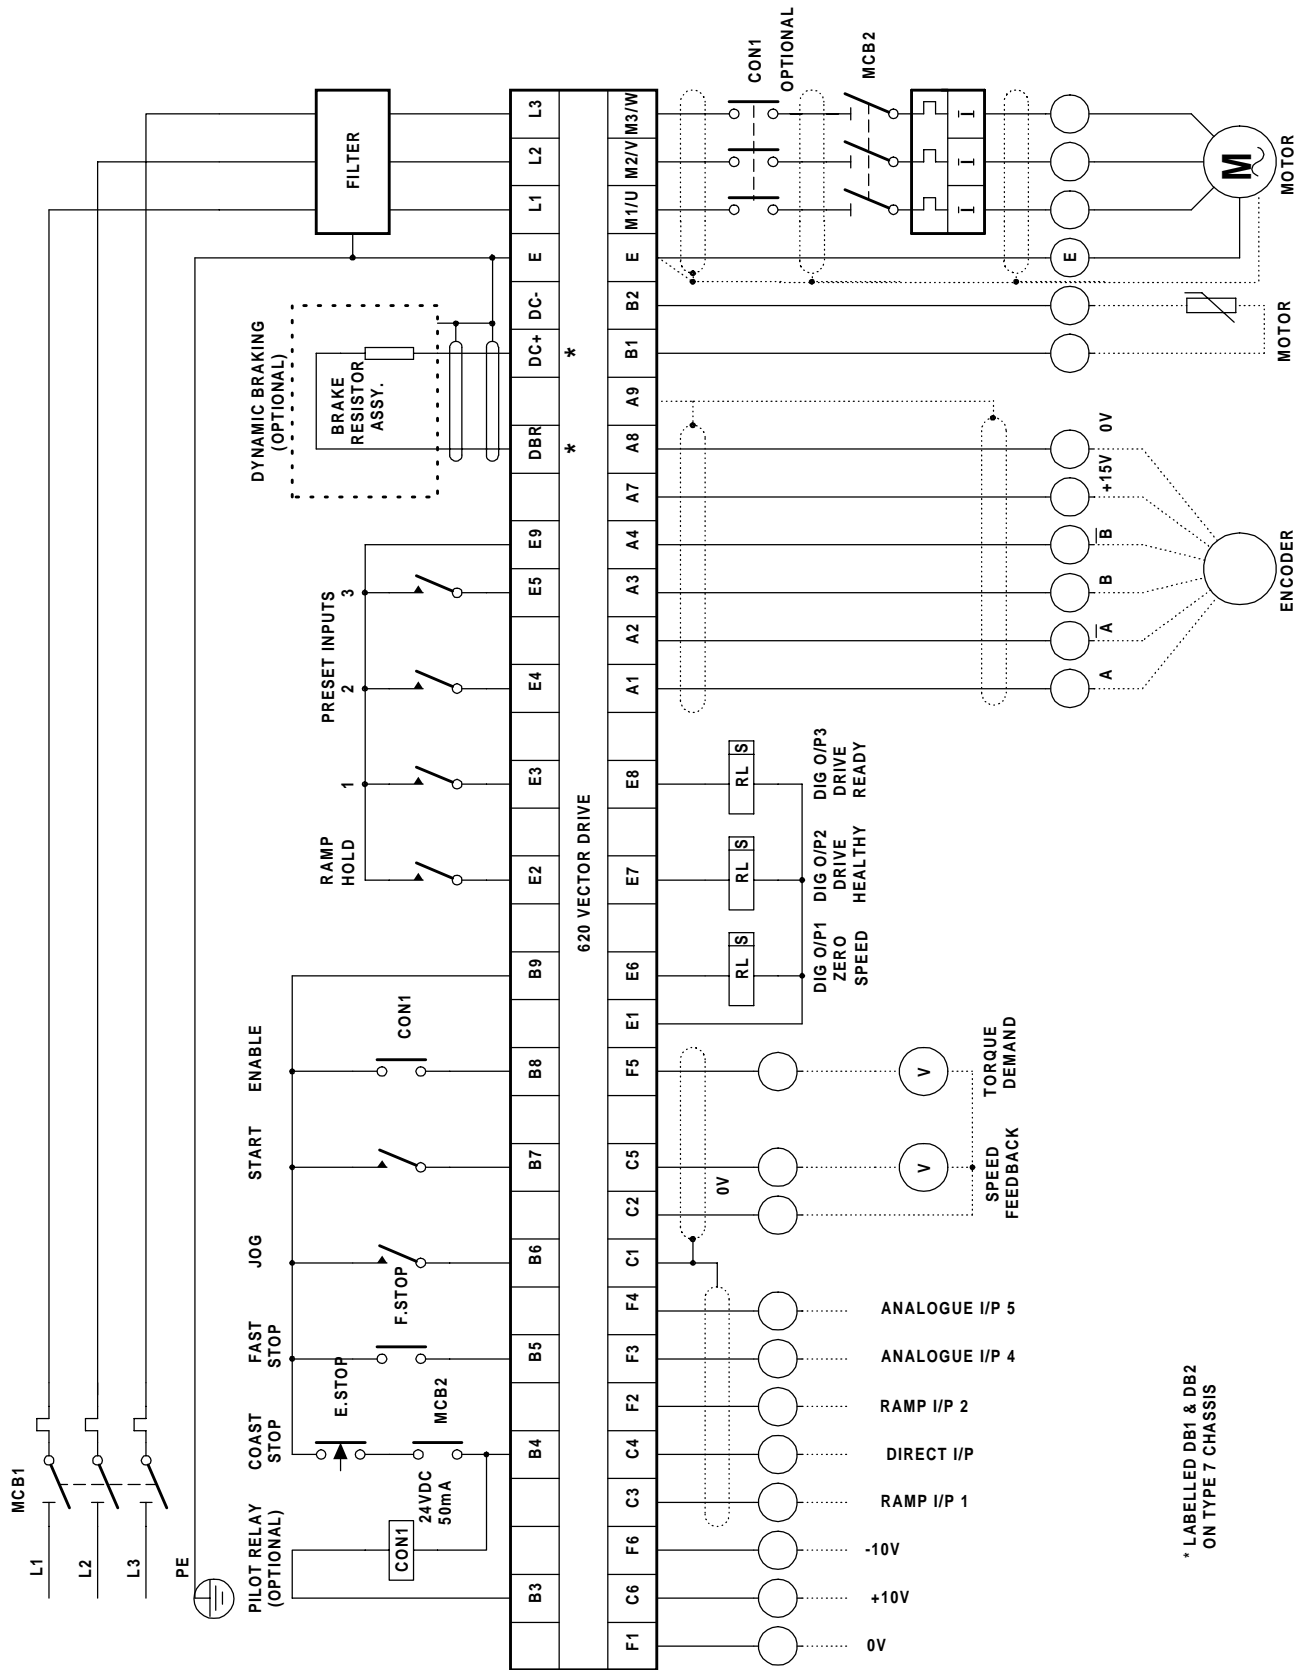


Figure 2.6 - Full wiring diagram for 620 series drives

2-6 Pre-Installation Planning

Differences between Drives

Each of the drive variants requires different rating breakers for MCB1. The requirements are shown in Table 2-1. (Entries with N/A indicate that the drive rating is not available for that type at that voltage.)

MCB2 should be rated according to the full load current of the motor.

Table 2-1 MCB requirements

Type	Power (kW)	208-240v	380-460v
4	0.75	10 A	10 A
	1.1	10 A	N/A
	1.5	10 A	20 A
	2.2	20 A	10 A
	4.0	20 A	20 A
	5.5	N/A	20 A
	7.5	N/A	20 A
	5.5	30 A	N/A
5	7.5	40 A	N/A
	11.0	N/A	32 A
	15.0	N/A	40 A
6	11.0	63 A	N/A
	15.0	100 A	N/A
	18.0	N/A	50 A
	18.5	100 A	N/A
	22.0	N/A	63 A
	30.0	N/A	100 A
	37.0	N/A	100 A
7	22.0	125 A	N/A
	30.0	160 A	N/A
	37.0	200 A	N/A
	45.0	N/A	125 A
	55.0	N/A	160 A
	75.0	N/A	200 A

TERMINAL DESCRIPTIONS

Terminals are provided for both the control and power connections to allow reliable connections with external devices and power supplies. The function of these terminals is described in tables 2.2 to 2.7.

Control Board Terminals

The control board terminals are identical for all variants of the 620 Vector Drive. The layout of the control board terminals is given in Figure 2.8, and the functions are described in Table 2.5. See Chapter 1 "ELECTRICAL RATINGS" for control terminal specification.

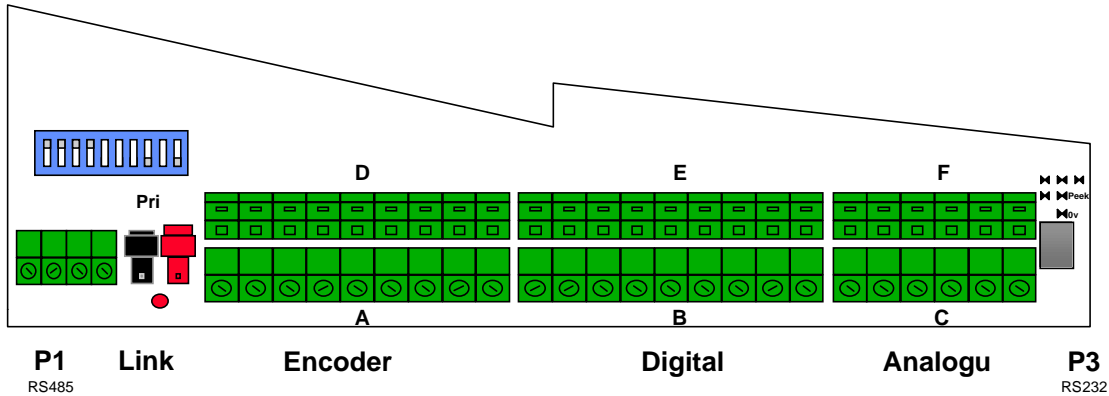


Figure 2.7 - Control Board Terminals

	Front / Lower	Back / Upper		
P1 RS-485 Serial Port	1	N/A	Transmit -	
	2	N/A	Transmit +	
	3	N/A	Transmit - / Receive -	
	4	N/A	Transmit + / Receive +	
Link Fibre Optics. (620L only)	Red	N/A	Transmit Primary	
	Black	N/A	Receive Primary	
Feedback Encoder	A	1	Reference Encoder (620Com & 620L only)	
	/A	2		A
	B	3		/A
	/B	4		B
	Z	5		/B
	/Z	6		Z
	Power (15v)	7		/Z
	0v	8		Power (15v)
	GND	9		0v
Digital I/O	1	1	GND	
	2	2	Aux. Digital I/O	
	3	3		0v
	4	4		Digital I/P 1
	5	5		Digital I/P 2
	6	6		Digital I/P 3
	7	7		Digital I/P 4
	8	8		Digital O/P 1
	9	9		Digital O/P 2
Analogue I/O	1	1		Digital O/P 3
	2	2	24v	
	3	3	Aux. Analogue I/O	
	4	4		0v
	5	5		Analogue I/P 3
	6	6		Analogue I/P 4
		Analogue I/P 5		
		Analogue O/P 2		

Figure 2.8 - 620 Terminal Layout

2-8 Pre-Installation Planning

Table 2.2 - Control Board Terminal Descriptions

Terminal Number	Terminal Description - <i>Feedback Encoder</i>
A1	A Channel A
A2	/A
A3	B Channel B
A4	/B
A5	Z Channel Z
A6	/Z
A7	15v Isolated Power supply for an encoder, connected internally to D7
A8	0v Isolated Power for an encoder, connected internally to D8
A9	GND connected internally to D9
NOTES	<ul style="list-style-type: none"> • For improved noise immunity run an individually shielded twisted pair per channel from the drive to the encoder. • In the case of a single-ended encoder, connect /A, /B and /Z from the drive to 0v at the encoder end. • See also DIP Switches page 11 • For electrical ratings, refer to Chapter 1.

Terminal Number	Terminal Description - <i>Digital I/O (Default configuration)</i>
B1	Thermistor/Microtherm 0v Terminals B1 and B2 must be linked if over temperature sensors are not used. The use of a motor temperature sensor is always recommended.
B2	Thermistor/Microtherm It is good practice to protect AC motors against sustained thermal overloads by fitting temperature sensitive resistors (thermistors) or switches in the windings of the machine. Thermistors have a low resistance (typically 200Ω) up to a reference temperature (125°C). Above this temperature, their resistance rises rapidly to greater than 2000Ω. Motor over temperature sensors should be connected in series between terminals B1 and B2. A motor over temperature alarm will be indicated if the external resistance between B1 and B2 exceeds 2.6kΩ ±200Ω. The alarm is reset at 1.1kΩ ±200Ω.

Terminal Number	Terminal Description - <i>Digital I/O (Default configuration)</i>
B3	Pilot/Health (Open Collector 50mA Sink) This output may be used to drive a pilot relay for an output contactor. The contactor will be brought in on power up or by a drive start by software. It is dropped out unconditionally, bypassing the software if COAST STOP (B4) is low or open circuit. It will also drop out in the event of an alarm becoming active.
B4	Coast Stop When the Coast Stop input is at +24v, the drive operates normally. When the Coast Stop is at 0v or open circuit, the drive no longer operates. The motor coasts to rest.
B5	Fast Stop When the Fast Stop input is held at 24v, the drive operates as required by the inputs. When the Fast Stop is at 0v or open circuit, the drive provides a controlled or fast stop as defined by the Fast Stop parameters.

Table 2.2 - Control Board Terminal Descriptions (Continued)

Terminal Number	Terminal Description - <i>Digital I/O (continued)</i>
B6	Jog ¹ When the Jog input is held at 24v the drive jogs, provided input B7 (Start) is held low and B4 (Coast Stop), B8 (Enable) & B5(Fast Stop) are held high. When the Jog input is removed the drive will ramp down to zero at the Jog Ramp Rate.
B7	Start ² When a high input is applied to this terminal the drive will operate provided there are no alarms, B6 (Jog) is held low, B4 (Coast Stop), B8 (Enable) & B5(Fast Stop) are held high. When the input is removed the drive will perform a regenerative stop to zero speed.
B8	Enable The Enable input provides a means of electronically inhibiting drive operation. If the enable input is low (false) all control loops ³ will be inhibited and the drive will not function.
B9	+24v power Internally generated +24v supply which can be used for digital inputs. Maximum load is 200mA.

Terminal Number	Terminal Description - <i>Analogue I/O (Default configuration)</i>
C1	GND Analogue screen connection.
C2	Signal 0v
C3	Ramp I/P 1 A bi-directional input that is summed with F2 to form the input to the System Ramp. +10v = Full speed -10v = Reverse full speed
C4	Direct I/P 2 Trim input direct into speed loop with high speed coupling. Used for external loops, i.e. position controllers. +10v = 100% Speed trim -10v = -100% Speed trim
C5	Analog O/P 1 Speed feed-back
C6	+10v Voltage reference

Terminal Number	Terminal Description - <i>Reference Encoder (620L version only)</i>
D1	A Channel A
D2	/A
D3	B Channel B
D4	/B
D5	Z Channel Z
D6	/Z
D7	15v Isolated Power supply for an encoder, connected internally to A7
D8	0v Isolated Power for an encoder, connected internally to A8
D9	GND connected internally to A9
NOTES	<ul style="list-style-type: none"> • For improved noise immunity run an individually shielded twisted pair per channel from the drive to the encoder. • In the case of a single-ended encoder, connect /A, /B and /Z from the drive to 0v at the encoder end. • See also DIP Switches page 11 • For electrical ratings, refer to Chapter 1.

¹ Jog is not operational in local mode.

² Start is not operational in local mode.

³ Except the PID

2-10 Pre-Installation Planning

Table 2.2 - Control Board Terminal Descriptions (Continued)

Terminal Number	Terminal Description - Aux. Digital I/O (Default Configuration)																																
E1	0v 0v for digital inputs.																																
E2	Digital I/P 1 (RAMP HOLD) If the input is held true, the System Ramp output is frozen at the last value irrespective of the Ramp Setpoint Input. When false, the System Ramp output follows the Ramped Setpoint with a delay determined by the Ramp time parameters. Ramp Hold is overridden by Ramp Reset.																																
E3 E4 E5	Digital I/P 2,3,4 (PRESET SELECT 1, 2, 3) These digital inputs are used to select 1 of 8 preset inputs as shown below: <table style="margin-left: 40px; border-collapse: collapse;"> <thead> <tr> <th colspan="3">SELECT</th> <th>Preset Selection</th> </tr> <tr> <th>3</th> <th>2</th> <th>1</th> <th></th> </tr> </thead> <tbody> <tr> <td>0v</td> <td>0v</td> <td>0v</td> <td>PRESET 1 selected</td> </tr> <tr> <td>0v</td> <td>0v</td> <td>24v</td> <td>PRESET 2 selected</td> </tr> <tr> <td>0v</td> <td>24v</td> <td>0v</td> <td>PRESET 3 selected</td> </tr> <tr> <td>0v</td> <td>24v</td> <td>24</td> <td>PRESET 4 selected</td> </tr> <tr> <td>...</td> <td>...</td> <td>...</td> <td>...</td> </tr> <tr> <td>24v</td> <td>24v</td> <td>24v</td> <td>PRESET 8 selected</td> </tr> </tbody> </table> <p>The preset inputs are set using the MMI. By default the presets are connected to one of the speed demand inputs.</p>	SELECT			Preset Selection	3	2	1		0v	0v	0v	PRESET 1 selected	0v	0v	24v	PRESET 2 selected	0v	24v	0v	PRESET 3 selected	0v	24v	24	PRESET 4 selected	24v	24v	24v	PRESET 8 selected
SELECT			Preset Selection																														
3	2	1																															
0v	0v	0v	PRESET 1 selected																														
0v	0v	24v	PRESET 2 selected																														
0v	24v	0v	PRESET 3 selected																														
0v	24v	24	PRESET 4 selected																														
...																														
24v	24v	24v	PRESET 8 selected																														
E6	Digital O/P 1 (ZERO SPEED) Default configuration. Active High at Zero speed. .																																
E7	Digital O/P 2 (Health) Default configuration. Active High while the drive is Health or START / JOG are low.																																
E8	Digital O/P 3 (Ready) Default configuration. Active High once the drive has successfully completed is pre-start checks and if Enabled will run.																																
E9	+24v power as terminal B9																																

Terminal Number	Terminal Description - Aux. Analogue I/O
F1	0v
F2	Analog I/P 3 Default configuration. Ramped input 2, a bi-directional input that is summed with C3 to form the input to the System Ramp. +10v = Full speed -10v = Reverse full speed
F3	Analog I/P 4 Not configured by default.
F4	Analog I/P 5 Not configured by default.
F5	Analog O/P 2 Default configuration. Torque demand output. +10v = 150% forward output torque -10v = 150% reverse output torque
F6	-10v Voltage reference

Terminal Number	Terminal Description - P1 RS-485 Serial port. (Only 4 wire 485 is supported)
G1	Transmit - (Four wire mode only)
G2	Transmit + (Four wire mode only)
G3	Receive - (Four wire)
G4	Receive + (Four wire)

DIP Switches

The control PCB also houses a set of dual in-line package (DIP) switches, located to the left of the terminals. The twelve switches are numbered, starting with 1 on the left.

The switches are ON when in the UP position (towards the centre of the drive) and OFF when in the DOWN position (towards the edge of the drive).

Switch 1 selects 2 or 4 wire serial communications, 2-wire is selected when the switch is ON, and 4-wire when the switch is OFF (only 4 wire supported).

Switch 2 connects or disconnects the line termination network between terminals G3 and G4. The network is connected when the switch is ON, and disconnected when the switch is OFF. The drive furthest from the host should have switch 2 ON, all other drive should switch 2 in the OFF position.

Switches 3 and 4 are only significant on 620 Link versions of the drive, which are equipped with fibre-optic communications facilities. The switches control the transmitter output power as follows:

Switch 5 is used to test the transmit output power by turning the transmitter permanently ON, when the switch is ON. In this mode a light meter can be used to check that the received power at the far end of the optical fibre is within limits. The switch must be OFF in the normal operation.

Table 2.3 Transmitter Power DIP Switches

2/4 wire

	Switch 1
4-Wire RS-485	Off
2-Wire RS-485 (Not Supported)	On

TX Power

	Switch 3	Switch 4	Switch 5
Low	Off	don't care	Off
Medium	On	Off	Off
High	On	On	Off
Test Mode	don't care	don't care	On

Feedback Encoder

	Switch 7	Switch 8	Switch 9
9v±1 Input Threshold	Off	Off	Off
4v±1 Input Threshold	On	On	On

Reference Encoder

	Switch 10	Switch 11	Switch 12
9v±1 Input Threshold	Off	Off	Off
4v±1 Input Threshold	On	On	On

Switch 6 is not used.

Switches 7 to 9 control the threshold sensitivity for the feedback encoder: switch 7 controls the A input, switch 8 the B input and 9 the Z input. Switches 10 to 12 control threshold sensitivity for the reference encoder (optional): switch 10 controls the sensitivity for the A input, switch 11 the B input and 12 the Z input.

When the switches are set ON, threshold sensitivity is $4V \pm 1V$.


When the switches are set to OFF, threshold sensitivity is $9V \pm 1V$.

Usually the switches will be set to give a threshold of 4V when using a differential encoder, and to 9V when using a single ended encoder.

For encoder supply refer to Chapter 5: "Function Blocks" - Calibration.

2-12 Pre-Installation Planning

Power Terminals

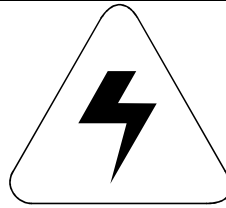



WARNING

ELECTRIC SHOCK HAZARD

THE POWER TERMINALS CARRY ELECTRICAL POWER WHICH CAN BE LETHAL. ISOLATE ALL POWER SUPPLIES AND THEN WAIT AT LEAST 3 MINUTES BEFORE REMOVING THE TERMINAL COVER OR WORKING ON ANY CONTROL EQUIPMENT OR MOTORS.

620 Type 4

Table 2.4 - 620 TYPE 4 Power Board Terminals

Terminal	Terminal Description
M1/U, M2/V, M3/W	Power outputs forming the 3-phase supply connection for the motor.
DC-	Power input/output. This terminal is used in conjunction with the DC+ terminal only when two or more controllers are coupled together. It carries a negative DC link voltage.
DC+	Power input/output. This terminal is used for connection to a braking resistor. It is also used in conjunction with the DC- terminal when two or more controllers are coupled together. It carries a positive DC link voltage (typically 600V referred to terminal DC-).
DBR1	Power input/output for the connection of a dynamic braking resistor. Refer to "DYNAMIC BRAKING" for further details. This terminal is connected to the negative side of the link capacitor when the brake option is not fitted.
L1, L2, L3	Power inputs. These terminals are the 3-phase mains supply input, 380 - 460V ± 10% or 208 - 240V ± 10% AC line-to-line.
PE / 	Power earth. This terminal must be connected to a permanent protective earth (ground).
	Motor earth connection. This terminal may be used for the protective earth connection to the motor.
	See Chapter 1, "MECHANICAL DETAILS" for tightening torque

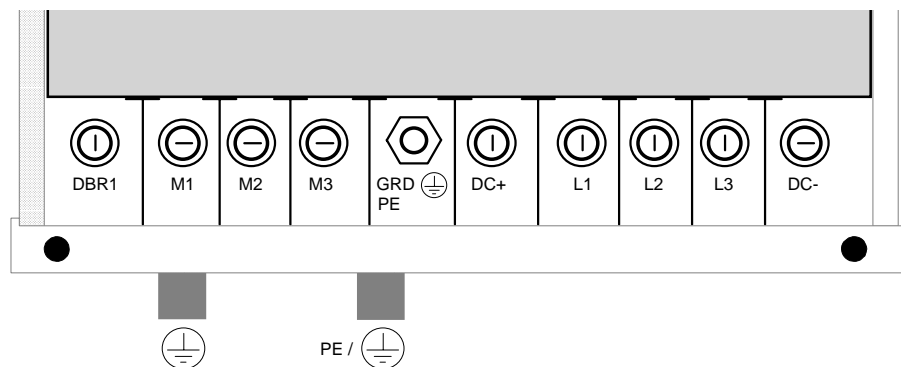




Figure 2.9 - 620 Type 4 Power Terminals

620 Type 5

Table 2.5 - 620 Type 5 Power Board Terminals

Terminal	Terminal Description
M1/U, M2/V, M3/W	Power outputs forming the 3-phase supply connection for the motor.
DC-	Power input/output. This terminal is used in conjunction with the DC+ terminal when two or more controllers are coupled together. It carries a negative DC link voltage.
DC+	Power input/output. This terminal is used for connection to a braking resistor. It is also used in conjunction with the DC- terminal when two or more controllers are coupled together. It carries a positive DC link voltage (typically 600V referred to terminal DC-).
DC	Power input/output. This terminal is connected to the negative side of the D.C. link capacitor. No customer connection must be made to this terminal.
DBR1	Power input/output for the connection of a dynamic braking resistor. Refer to " DYNAMIC BRAKING " for further details. This terminal is connected to the negative side of the link capacitor when the brake option is not fitted.
L1, L2, L3	Power inputs. These terminals are the 3-phase mains supply input, 380 - 460V ± 10% or 208 - 240V ± 10% AC line-to-line.
PE / 	Power earth. This terminal must be connected to a permanent protective earth (ground).
	Motor earth connection. This terminal may be used for the protective earth connection to the motor.
See Chapter 1, " MECHANICAL DETAILS " for tightening torque	

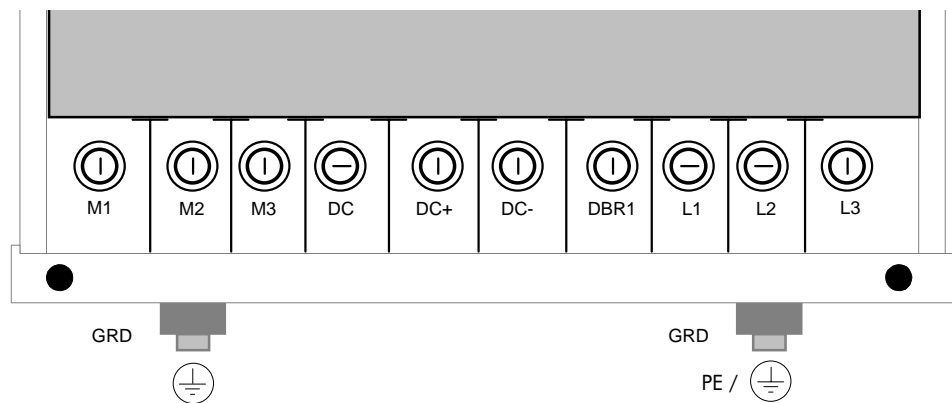




Figure 2.10 - 620 Type 5 Power Terminals

2-14 Pre-Installation Planning

620 Type 6

Table 2.6 - 620 TYPE 6 - Power Terminals

Terminal	Terminal Description
M1/U, M2/V, M3/W	Power outputs forming the 3-phase supply connection for the motor.
DC-	Power input/output. This terminal is used in conjunction with the DC+ terminal when two or more controllers are coupled together. It carries a negative DC link voltage.
DC+	Power input/output. This terminal is used for connection to a braking resistor. It is also used in conjunction with the DC- terminal when two or more controllers are coupled together. It carries a positive DC link voltage (typically 600V referred to terminal DC-).
DBR1	Power input/output for the connection of a dynamic braking resistor. Refer to "DYNAMIC BRAKING" for further details. This terminal is connected to the negative side of the link capacitor when the brake option is not fitted.
L1, L2, L3	Power inputs. These terminals are the 3-phase mains supply input, 380 - 460V \pm 10% or 208 - 240V \pm 10% AC line-to-line.
PE / 	Power earth. This terminal must be connected to a permanent protective earth (ground).
	Motor earth connection. This terminal may be used for the protective earth connection to the motor.
	See Chapter 1, "MECHANICAL DETAILS" for tightening torque

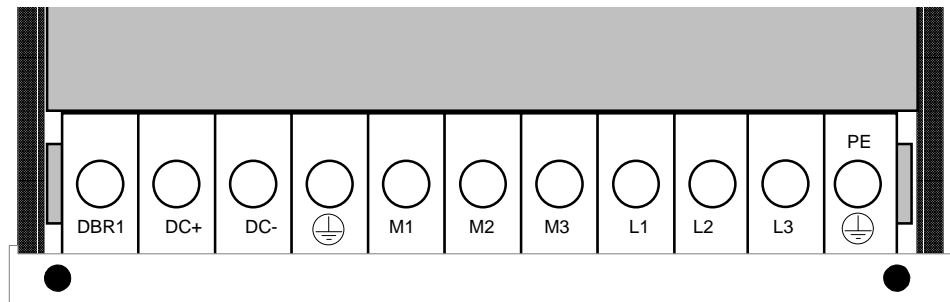




Figure 2.11 - 620 Type 6 Power Board Terminals

620 Type 7

Table 2.7 - 620 TYPE 7 - Power Terminals

Terminal	Terminal Description
M1/U, M2/V, M3/W	Power outputs forming the 3-phase supply connection for the motor.
DC-	Power input/output. This terminal is used in conjunction with the DC+ terminal when two or more controllers are coupled together. It carries a negative DC link voltage.
DC+	Power input/output. This terminal is used in conjunction with the DC- terminal only when two or more controllers are coupled together. It carries a positive DC link voltage (typically 600V referred to terminal DC-).
DBR1	Power output. This terminal is used for connection to a braking resistor. Refer to "DYNAMIC BRAKING" for further details. This terminal is connected to the negative side of the link capacitor when the brake option is not fitted.
DBR2	Power output. This terminal is used for connection to a braking resistor.
L1, L2, L3	Power inputs. These terminals are the 3-phase mains supply input, 380 - 460V ± 10% or 208 - 240V ± 10% AC line-to-line.
PE / 	Power earth. This terminal must be connected to a permanent protective earth (ground).
	Motor earth connection. This terminal may be used for the protective earth connection to the motor.
	See Chapter 1, "MECHANICAL DETAILS" for tightening torque

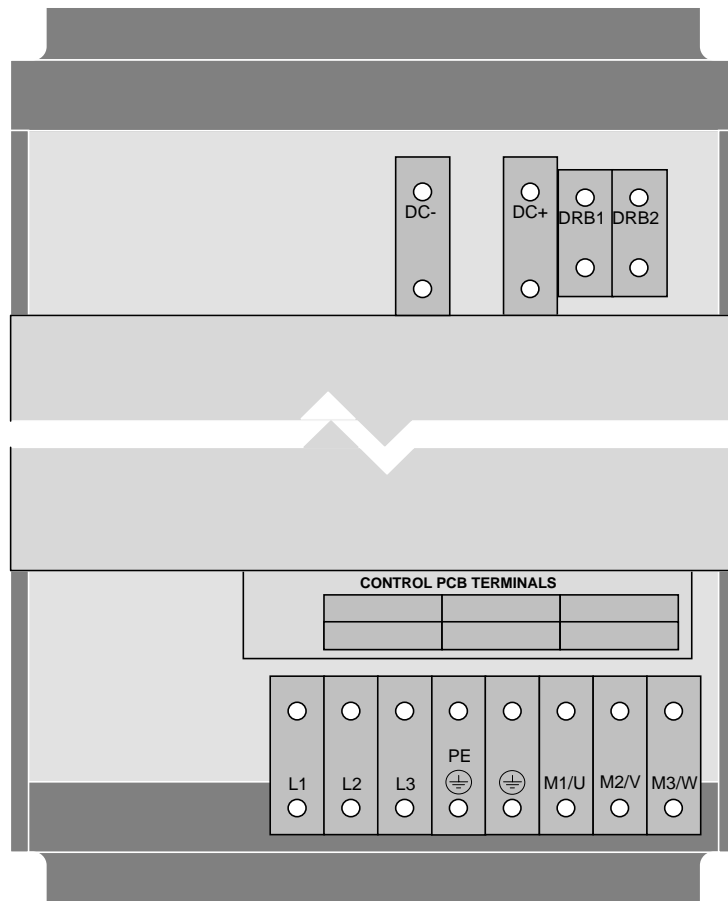


Figure 2.12 - 620 Type 7 Power Terminals

EMC

Refer to Chapter 3 for EMC Installation guidelines.

2-16 Pre-Installation Planning

TERMINATIONS

UL Compression Lug Kit is available for the drives which provide a set of lugs suitable for the following ratings. These lugs must be applied with the correct tooling as described in the Installation Instructions provided with each Lug Kit.

The following terminal kit is available for the connection of Power Cabling.

Product	Supply Voltage	Constant Torque	Quadratic Torque	Kit No.	Lug Size	Amp Part No.
620	380 - 460V	11kW	---	LA389585	#8 AWG	52263-1
	380 - 460V	15kW	---			
	208 - 240V	5.5kW	---			
	208 - 240V	7.5kW	---			